

- 4487 Scherenstromab- 85209  
nehmer  
4130-60 Stromabnehmerplatte 92,566  
4130-61 Schraube  
4130-51 Abziehbild 89920  
Nr. 1 u. Nr. 2  
4131-62 Haltegriff 92,583  
4131-17A Fenstersatz 92,585  
4131-14 Kühlspirale 92,576  
4131-01A Gehäuse kpl. grün 92,573  
4131-01B Gehäuse  
beige-türkis 92,580  
einschl. Fenster-  
ohne Lichtleitstäbe

- 4487 Pantograph  
4130-60 Pantograph plate  
4130-61 Screw  
4130-51 Transfer picture  
No. 1 and No. 2  
4131-62 Handrail  
4131-17A Glazing set  
4131-14 Condensing spiral  
4131-01 Body, painted  
4131-01A Body Assembly, green  
4131-01B Body Assembly,  
beige-turquoise, incl.  
glazing without light  
transmission bar

- 4131-02 Isolatorgruppe 8802,1  
4130-24 Stützisolator 8804,1  
4131-03 Trafoisolator 8802,2  
4131-04 Stützisolator 8802,3  
4131-05A Dachleitungssatz 92,582  
4130-15 Lokpfeife 92,560  
4131-08  
4131-09  
4141-10 } Dachstegsatz 92,584  
4131-11 } 4131-08A  
4131-12 }  
4131-13 }

- 4131-02 Insulator group  
4130-24 Support insulator  
4131-03 Transformer insulator  
4131-04 Support insulator  
4131-05A Roof conducting-wire  
set  
4130-15 Loco whistle  
4131-08  
4131-09  
4141-10 } Roof gangway set  
4131-11 } 4131-08A  
4131-12 }  
4131-13 }

- 4131-19 Lichtleitstab 92,578  
4131-20 Lichtleitstab 92,581

- 4131-19 Light transmission bar  
4131-20 Light transmission bar

- 4130-31 Schaltkontakt 89741  
4130-31 Switch contact

- 4132-77 Feder 86205  
4132-77 Spring

- 4128-22 Schaltbolzen 89740  
4128-22 Switch pin

- 4130-63 Schraube  
4130-63 Screw

- 4130-36 Kondensator 89894  
4151-31 Ventilzelle 89890  
4573-01 Glühlampe  
4132-80A Kontaktplatte komplett 87605  
4130-35 Drosselspule 89893  
4130-36 Condenser  
4151-31 Diode  
4572-01 Lamp  
4132-80A Printed circuit assembly  
4130-35 Throttle-coil


# 4131



# international


- 4130-52 Feder **86206**
- 0913-A Motor kpl. **85005**
- 4130-27 Federnabe **87006**
- 4130-32 Federnabe
- 4130-53 Gummibettung **89403**
- 4130-12A Getriebekasten kpl. einschl. Rahmen und Räder **92566**

- 4130-52 Spring
- 0913-A Motor Assembly
- 4130-27 Spring pick-up
- 4130-32 Spring pick-up
- 4130-53 Rubber embedding
- 4130-12A Gearcase Assembly incl. frame and wheels

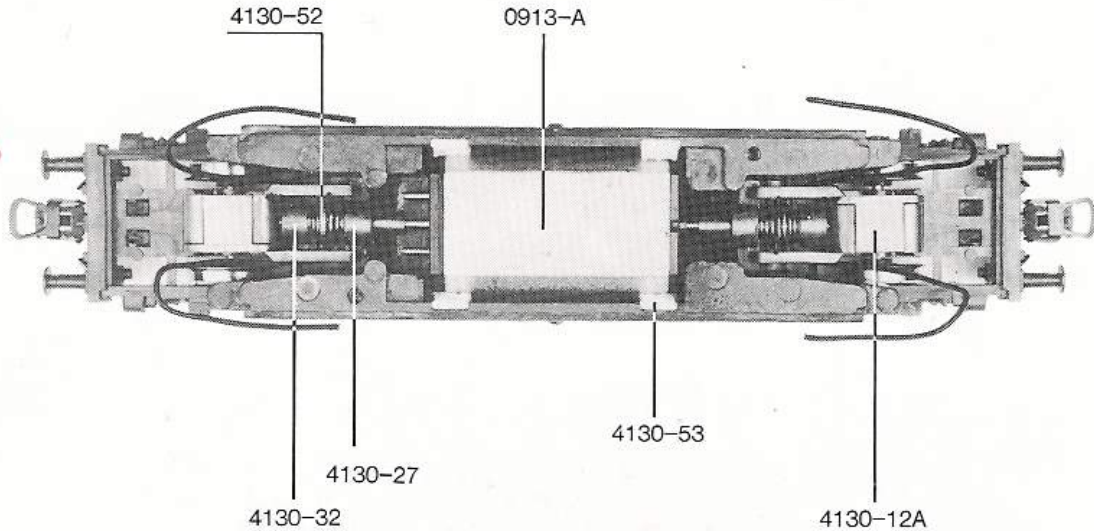

- 4151B-01 Schnecke **86701**
- 3341 Schneckenlager **89753**
- 4151B-04 Zahnrad **86405**
- 4151B-05 Zahnrad **86406**
- 5150-18 Schneckenachse
- 5150-22 Radstromkontakt **89804**
- 4130-44 Klemme **95463**

- 4151B-01 Worm
- 3341 Worm bearing
- 4151B-04 Gear
- 4151B-05 Gear
- 5150-18 Worm axle
- 5150-22 Wheel wiper
- 4130-44 Clamp

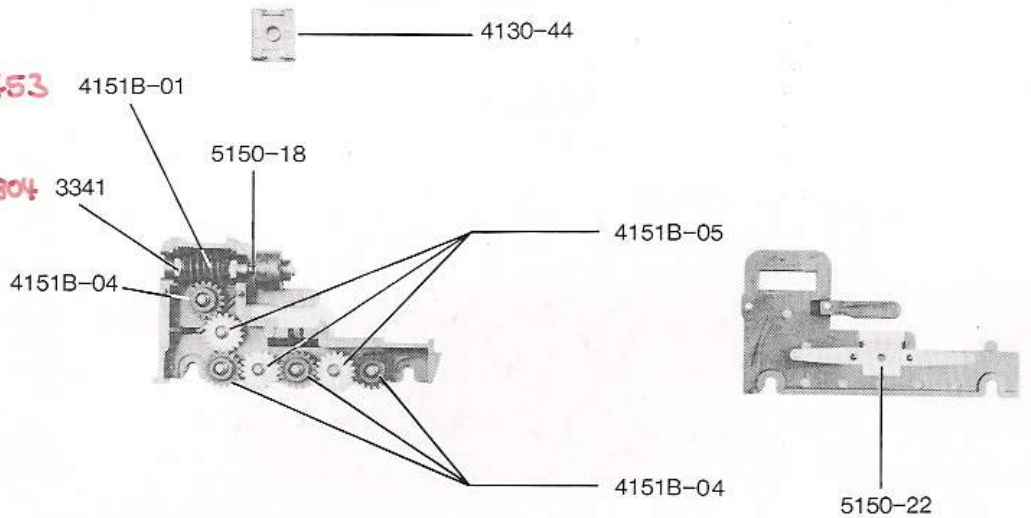

- 4195S-A03 Radsatz **80329**
- 4195S-A04 Hafringradsatz **90330**
- 4489 -011 Hafring **85601**

- 4195S-A03 Wheel set
- 4195S-A04 Traction tyre set
- 4489 -011 Traction tyre



- 89205** 4456 Standard Kupplung
- 4469 Kupplung, passend zu Fleischmann **89237**
- 4130-08 Pufferteller **88540**
- 92577** 4131-15 Sicherheitsfahrshalter
- 4130-04 Zylinder **92555**
- 93783** 4130-22 Drehgestellrahmen
- 4130-07 Schienenräumer **92558**

- 4456 Standard coupler
- 4469 Coupler fitting with Fleischmann
- 4130-08 Puffer plate
- 4131-15 Safety-drive switch
- 4130-04 Cylinder
- 4130-22 Truck frame
- 4130-07 Pilot plow

